


Aromatherapy from your Amaircare® XR-100.

It's a whole new way to enjoy aromatherapy. Relax, entice or stimulate your mind and body with an available variety of natural essences of plants and flowers while you breath cleaner, healthier air!

Destroy odors with Odortec™ packets

Odortec™ packets use a special blend of essential oils that destroy odors when introduced into the air by the XR-100. Now you can get rid of many common odors that can get trapped in carpets, upholstery, drapes and clothing.

Place an aromatherapy or Odortec packet between the motor/fan housing and the filter cartridge of the XR-100, attach the filter cartridge and plug in the unit. The special aromatic essence or odor-destroying essential oils are introduced into the air.

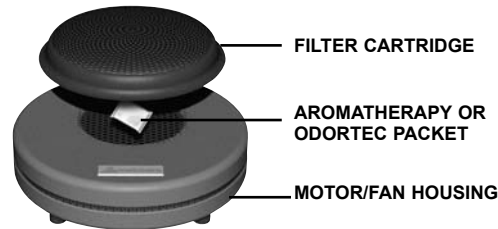

Ask your Amaircare® dealer about aromatherapy and Odortec™ packets.

Specifications

DIMENSIONS: 8" D 3.5"H

WEIGHT: Dry: 2.1 lbs.

AIR FLOW (C.F.M.): 20

CLASSIFICATION

- Portable Air Cleaning Device
- U.L. and C.S.A. approved

MATERIALS:

motor/fan housing: 24 gauge steel
filter cartridge: injection molded polystyrene

FINISH: Powder coated baked enamel (motor/fan housing)

COLOR: Sandtext Black

INTAKE (Upper Section)

Via a removable three-stage filter cartridge

OUTFLOW (Lower Section)

Cleaned air outflows through perimeter grill

MOTOR/FAN

- Designed for continuous operation.
- Run tested for 35,000 hours
- Service: 120 Volt, 60 Hz or 230 Volt, 50/60 Hz

Limited Warranty

The motor/fan in this Amaircare® product is warranted by Americair Corporation to the original retail purchaser for FIVE (5) YEARS from the date of purchase. All other components (except filters) are warranted for ONE (1) YEAR. Americair will repair or replace at its option the component(s) which upon inspection by an authorized Amaircare® dealer proves to have failed in normal use, due to defects in material or workmanship, or, at its option, to replace the unit.

Operations other than those recommended in this manual or at voltages other than that specified on the unit, or any attempts by unauthorized personnel to service or modify the unit will void the warranty.

WARRANTY SERVICE IS AVAILABLE BY BRINGING YOUR UNIT, OR SENDING IT POSTAGE PREPAID, WITH PROOF OF PURCHASE TO THE VENDOR WHO SOLD YOU THE UNIT.

AMERICAIR CORPORATION 770 Gana Crt. Mississauga, Ontario, Canada L5S 1P1

Amaircare is a trade mark (registered in the U.S.) of Americair Corporation.

Americair Corporation reserves the right to change or modify any specifications without notice.

10/2001

visit our website at www.amaircare.com

XR-100 Portable Air Filtration System

Instruction Manual



 **amaircare®**

Cleaning the air you breathe.

Congratulations on your purchase of the Amaircare® XR-100 portable air filtration system. With proper care and maintenance, your XR-100 will provide many years of reliable service.

Installation

The XR-100 mounts to your vehicle's head rest as shown.

1. Raise the head rest to its maximum height.

2. Position the unit against the back of the head rest with the receptacle at the bottom and the screen facing out.

3. Wrap the strap around the supports of the head rest and through the buckle. Pull on the strap to tighten it.

4. Lower the head rest. The unit should be firmly secured to the head rest. If it is loose adjust the strap until it is secure.

5. Insert the small plug of the adapter cord into the receptacle on the bottom of the unit. Plug the other end into your vehicle's cigarette lighter. The unit comes on when you plug it in. Unplug the unit when not operating the vehicle.

Cleaning your XR-100


Use a soft, damp cloth to wipe down the motor/fan housing. You can also use a non-abrasive cleaner. The filter cartridge can be disassembled and the components cleaned with a mild detergent and warm water. Do not let water get into the filters themselves or the motor/fan housing.




Filter pack replacement instructions

1. Unplug the unit to turn it off. You may wish to remove the unit from your car seat by undoing the mounting strap.

2. Remove the filter cartridge by rotating it counter-clockwise. The cartridge requires only a partial rotation to dislodge from the motor/fan housing.

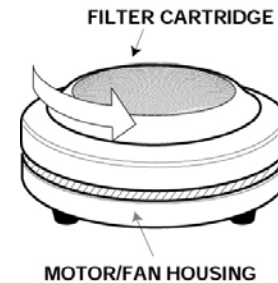


3. Remove the four screws on the underside of the filter cartridge to separate the screen covering from the filter container.

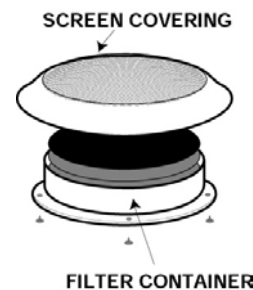


4. Remove the old filters and carefully discard them. Do not shake the filters as this can cause trapped particles to fall out. You may wish to clean the screen covering and filter container with soap and warm water.

5. Remove the new filter-pack from the packaging, keeping the individual filters in the order they came in. Place the new filter-pack into the filter container with the black filter on top.

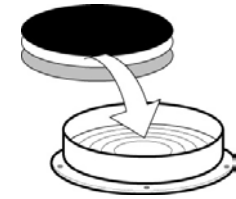

6. Reassemble the filter cartridge and replace it on the motor/fan housing.

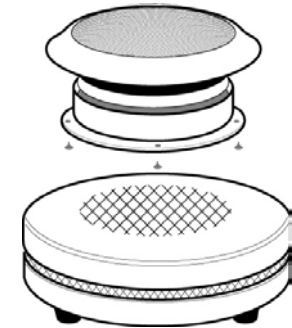

7. If you removed the unit from your car seat, reinstall it with the mounting strap, pulling the strap tightly so the unit mounts firmly to the seat.

8. Plug the XR-100 into your vehicle's cigarette lighter, or plug it into a wall receptacle with the supplied 12V DC adapter if you wish to use the XR-100 in your home, office or hotel room.

NOTE: Do not attempt to vacuum or shake-out the filters to remove dirt, as this can damage the filters. Filters are disposable items and should be changed regularly to ensure the unit works properly.

Replace the filter-pack every 4 to 6 months.